




Motor Test

CAUTION: Be careful not to damage the seats, the interior trim or the body.

1. Remove the power seat, then disconnect the 2-P connector from the slide motor.
2. Remove the two screws, then remove the power seat switch from the power seat.
3. Disconnect the 5-P connector from the power seat switch (recline switch side).

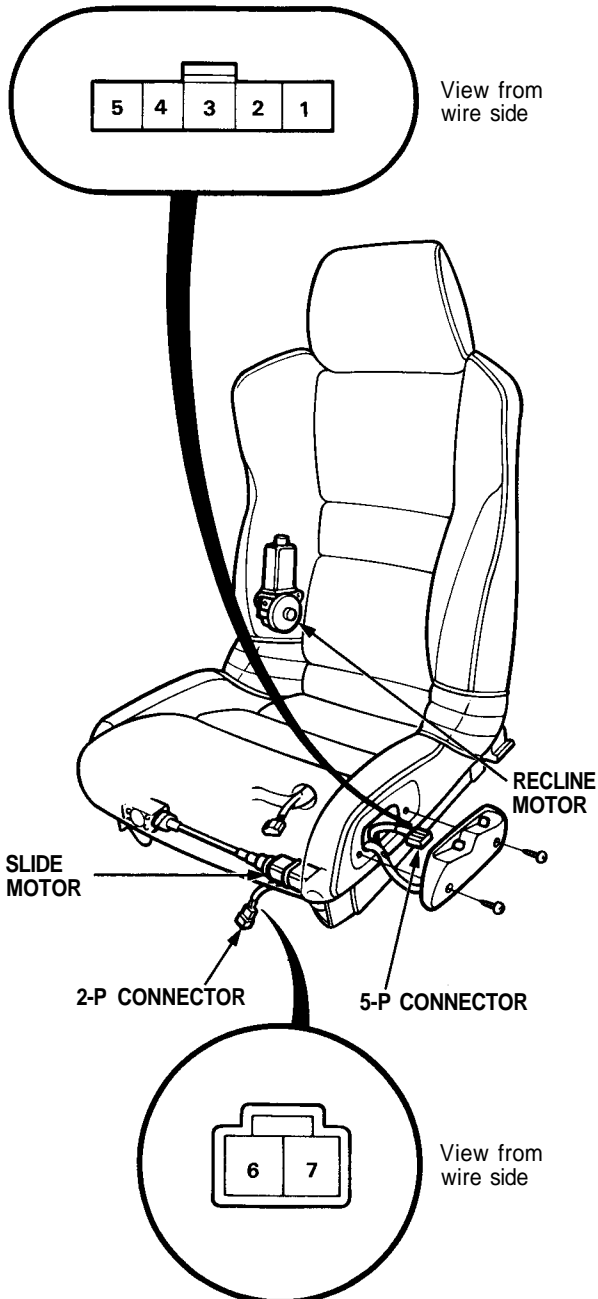

4. Test motor operation.

CAUTION: When the motor stops running, disconnect power immediately.

FORWARD

SLIDE: Connect battery power to the No. 6 terminal and ground to the No. 7 terminal.

BACKWARD

SLIDE: Connect battery power to the No. 7 terminal and ground to the No. 6 terminal.

FORWARD

RECLINE: Connect battery power to the No. 4 terminal and ground to the No. 1 terminal.

BACKWARD

RECLINE: Connect battery power to the No. 1 terminal and ground to the No. 4 terminal.

NOTE: If a motor does not run, reverse the power and ground connections. If the motor still does not run, the motor or the wire harness is faulty.