


Rear Window Defogger

Component Location Index

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS [section 24](#) before performing repairs or service.

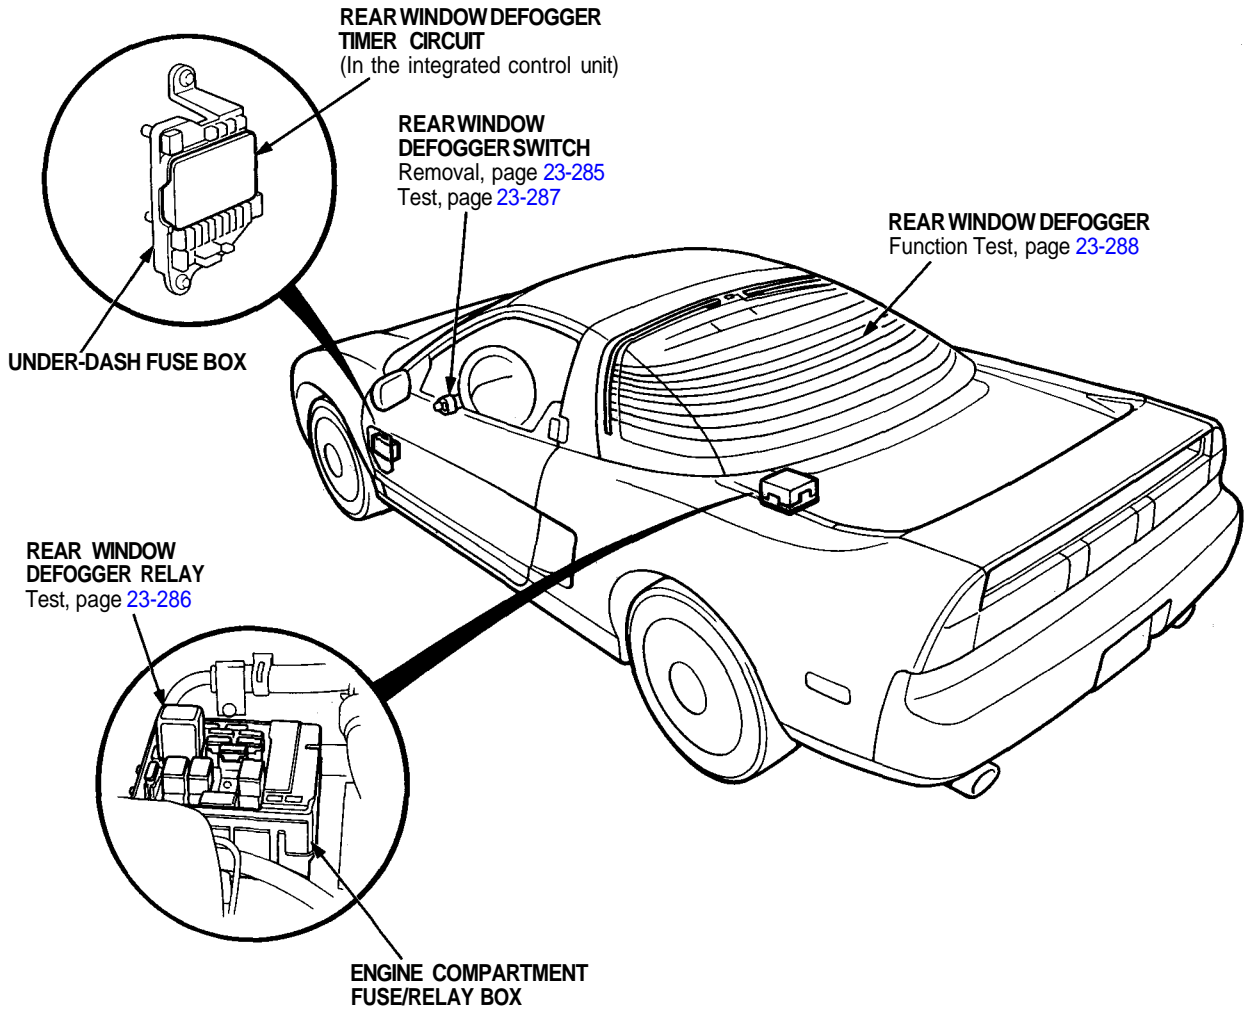

Description

The rear window defogger is controlled by the integrated control unit. When the defogger switch in the combination switch is pushed, it sends a signal to the defogger timer in the integrated control unit, and the defogger stays on for 25 minutes (40 minutes for Canada models) or until the ignition switch is turned off. The indicator light in the switch shows when the defogger is on.