

# Rear Window Defogger

## Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected									Open circuit, loose or disconnected terminals	
Symptom	Blown indicator light bulb	Blown No 4 (15 A) fuse (In the under-dash fuse box)	Defogger timer circuit input (In the integrated control unit)	Blown No. 5 (15 A) fuse (In the under-dash fuse box)	Blown No. 11 (40 A) fuse (In the engine compartment fuse/relay box)	Rear window defogger function test	Rear window defogger relay	Broken defogger wire	Poor ground	
Defogger works, but indicator light does not go on.	1									YEL/BLK or YEL/WHT
Defogger does not work and indicator light does not go on.		1	3	2				G401 G402 G403		YEL/BLK or YEL/WHT
Defogger does not work, but indicator light goes on.					1	3	2	4	G801	YEL/WHT, YEL/BLK or BLK/GRN
Operation time is too long or too short. Normal operation time is 25 minutes (40 minutes for Canada models).			1							WHT/BLU, WHT/RED or BLK