

# Rear Window Defogger

## Relay Test

1. Remove the defogger relay in the engine compartment fuse/relay box.
2. Check continuity at the relay terminals.
  - There should be continuity between the C and D terminals.
  - There should be continuity between the A and B terminals when power and ground are connected to the C and D terminals.
  - There should be no continuity between the A and B terminals when power is disconnected.

