


Switch Test

1. Remove the dashboard lower cover (see page [23-285](#)).
2. If necessary, remove the dashboard lower pad.
3. Disconnect the 18-P connector from the floor wire harness.
4. Check for continuity between the terminals in each switch position according to the table.

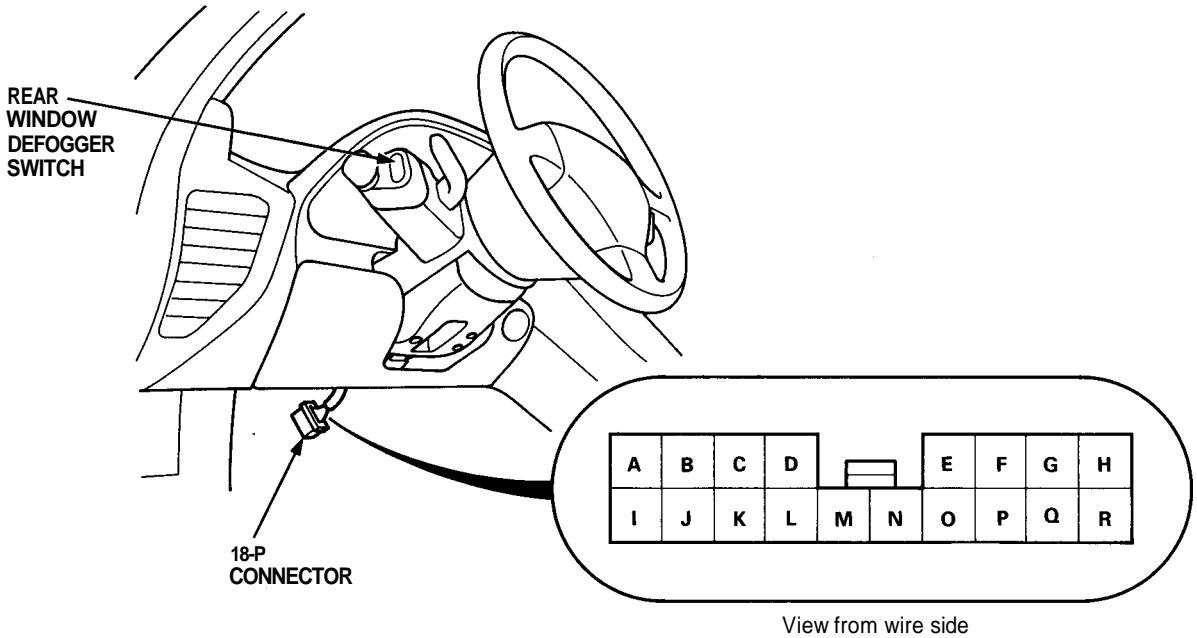

| Terminal | B | I | H | | R | A | | Q |
|----------|---|---|---|---|---|---|---|---|
| Position | | | | | | | | |
| PUSHED | ○ | ○ | | | | ○ | | |
| RELEASED | | | ○ | ⊖ | ○ | ○ | ⊖ | ○ |

