



Wipers/Washers

Windshield Wiper/Washer Switch Test

- 1. Remove the dashboard lower cover (see page 23-294).
- 2. Disconnect the 20-P connector from the floor wire harness.
- 3. Check for continuity between the terminals in each switch position according to the table.

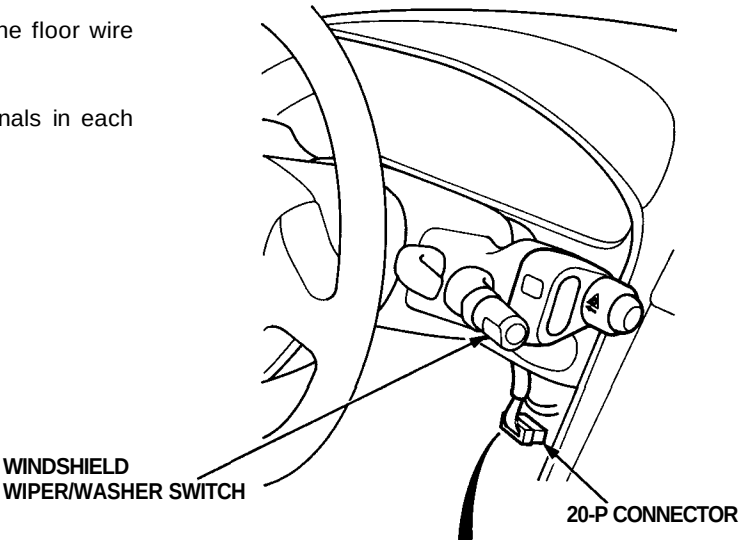

A	B	C	D		E	F	G	H	I
J	K	L	M	N	O	P	Q	R	S

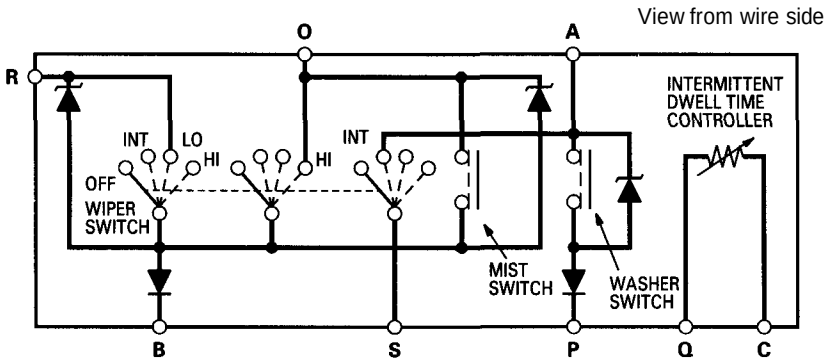

Terminal	A	B	C		O		P	Q	R	S
Position										
INT	○									○
LO		○		◀					○	
HI		○		◀	○					
Mist switch "ON"		○		◀	○	▶			○	
Washer switch "ON"	○			▶			○			
Intermittent dwell time controller turned			○			0-10KΩ		○		