
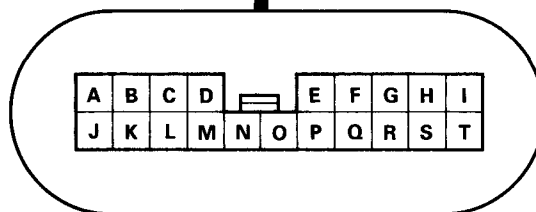


Cruise Control

Main Switch Test

1. Remove the dashboard lower cover (see page [23-305](#)).
2. If necessary, remove the dashboard lower pad.
3. Disconnect the 20-P connector, and check for continuity between the terminals, in each switch position, according to the table.

| Terminal | M | L | | B | H | | G |
|----------|---|---|---|---|---|---|---|
| Position | | | | | | | |
| OFF | | ○ | ⊖ | ○ | ○ | ⊖ | ○ |
| ON | ○ | ○ | ⊖ | ○ | ○ | ⊖ | ○ |

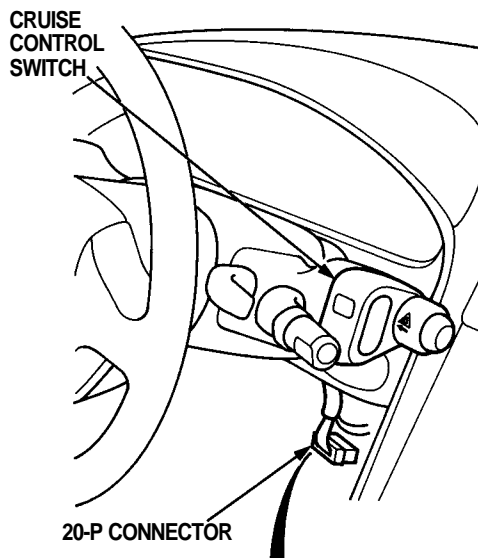

View from wire side

