


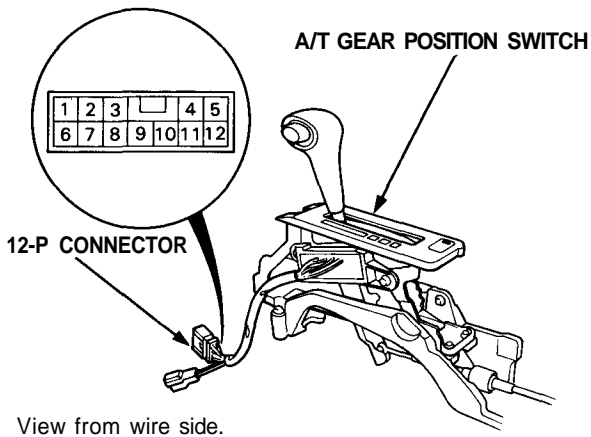

A/T Gear Position Switch Test

1. Remove the front console, then disconnect the 12-P connector from the A/T gear position switch.
2. Check for continuity between the terminals in each switch position according to the table.
 - Move the lever back and forth at each position without touching the push button, and check for continuity within the range of free play of the shift lever.
 - If there is no continuity within the range of free play, adjust the position of the A/T gear position switch (see page 23-160).



A/T Gear Position Switch (For cruise control)

Terminal	5	8
Position		
1		
2	○	○
3/M	○	○
D	○	○
N		
R		
P		