



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		In the engine compartment fuse/relay box		In the under-hood fuse/relay box	Faulty indicator light (LED)	Horn circuit	Starting system	A/T: A/T gear position switch	Lighting system	Door key switch	Ignition key switch	Trunk key switch	Trunk latch switch	Hood switch	Engine compartment lid switch	Door switch	Roof lock switches *1	Control unit input	Poor ground	
		Blown No. 18 (20 A) fuse	Blown No. 5 (15 A) fuse																	
Symptom																				
Security alarm can't be set (indicator light does not flash).		1	2	3	4						5								G401 G402 G403 G404	YEL/BLU, YEL, WHT/GRN, GRN or BLU/GRN
Starting system does not work.							1	2										3	G401 G402 G403 G404	BLK/WHT, BLK/GRN or BLK/YEL
Security alarm can be set, but alarm does not work when the trunk, hood or either door is unlocked without the key.	Horn alarm			1	2													3		WHT/GRN, ORN/BLK, YEL/GRN ¹ or LT GRN/WHT
	Headlight alarm							1										2		LT GRN/RED, BLU/RED ¹ or RED/YEL
	Both alarms																	1		
Alarm not canceled when the door is unlocked with the key.									1									2	G401 G402 G403 G404	GRN/YEL ¹ , GRN/YEL ² , BLU/RED ² or BLU/RED ³
Alarm not canceled when the key is inserted in the ignition switch.			1							2								3		YEL
Alarm not canceled when the trunk lid is opened with the key.												1	2					3	G551	BRN/WHT or WHT
Alarm does not work when the hood is opened.														1				2	G301	YEL/GRN ²
Alarm does not work when the engine compartment lid is opened.															1			2	G401 G402 G403	BLU
Alarm does not work when the doors are opened.																1		2	G401 G402 G403	GRN/BLU or GRN/RED
Alarm does not work when the roof is unlatched*1.																	1	2	G401 G402 G403	RED/GRN or RED/YEL

*1: NSX-T (open top)