



# Timing Belt

## Illustrated Index

### NOTE:

- Turn the crankshaft so that the No. 1 piston is at top dead center (TDC) (page 6-25, 26)
- Replace rubber seals if damaged or deteriorated.
- Prior to installing the cylinder head cover, apply a thin layer of liquid gasket to the mating surface of the cylinder head cover and rubber seals to prevent the rubber seal from falling of.
- After installation, fill the engine with oil up to the specified level, run the engine for more than 3 minutes, then check for oil leakage.
- When installing a new crankshaft;
  - ① tighten the crankshaft pulley bolt to 280N·m (28 kg-m, 203 lb-ft),
  - ② loosen it,
  - ③ retighten it to 250 N·m (25 kg-m, 181 lb-ft).

