

# Idle Control System


## Troubleshooting Flowchart — Starter Switch Signal

This signals the ECM when the engine is cranking.

Inspection of starter switch signal.

Connect the test harness between the ECM and connectors (see page 11-37).

Measure voltage between C11 (+) terminal and A26 (-) terminal with the ignition switch in the start position.

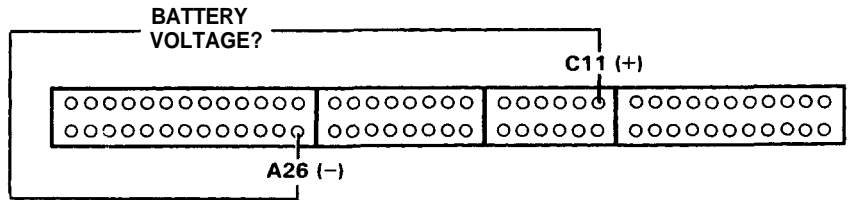

- NOTE:
- M/T: Clutch pedal must be depressed.
  - A/T: in **N** or **P** range.

Is there battery voltage?

NO

Inspect No. 7 (7.5 A) fuse in the under-dash fuse box.

Is the fuse OK?

NO

Replace the fuse.

YES

Repair open in BLK/WHT wire between ECM (C11) and No. 7 fuse.

YES

Starter switch signal is OK.