




Throttle Body (cont'd)

Disassembly

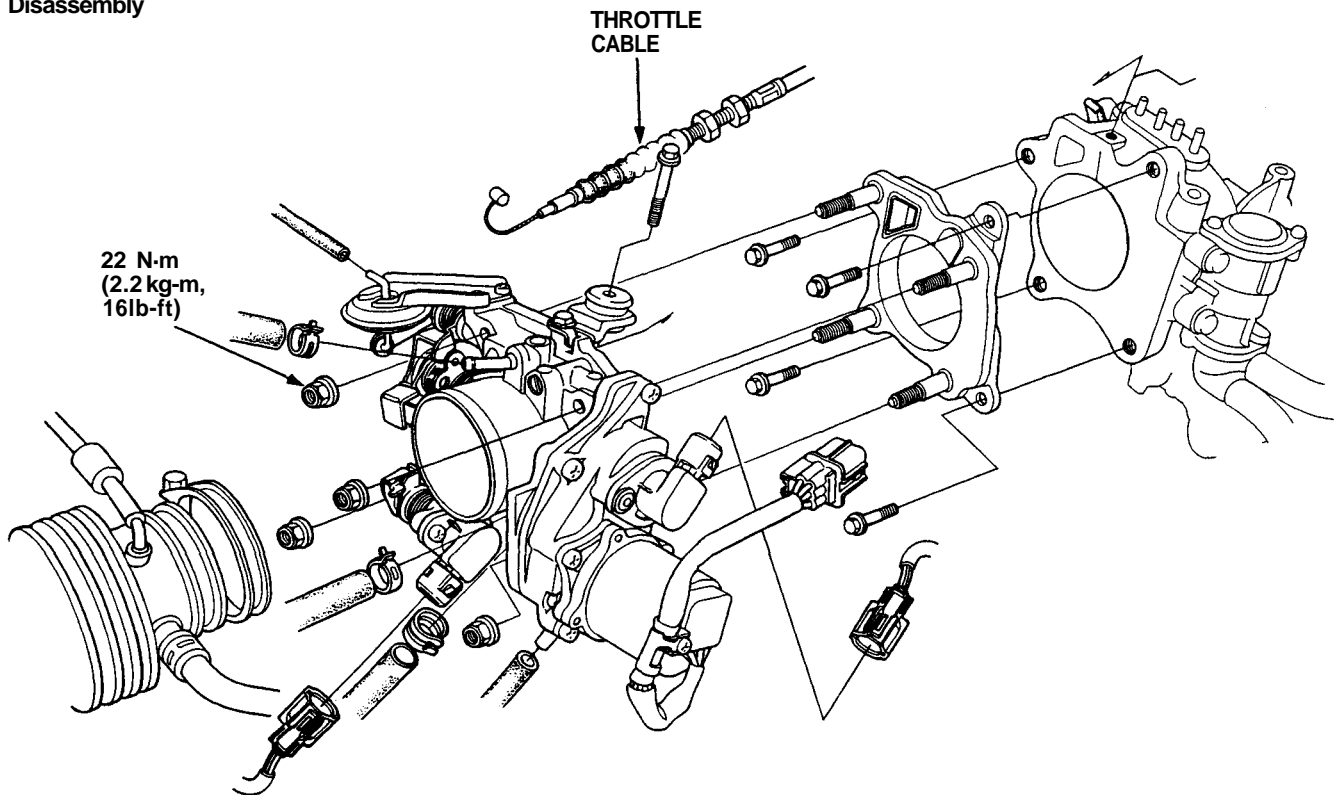

CAUTION:

- The throttle stop screw is non-adjustable.
- After reassembly, adjust the throttle cable (see page 11-130).
- After replacement, adjust the idle speed (see page 11-102).

