



ATF Cooler

The radiator is mounted at the front of the vehicle. The ATF cooler is installed directly on the transmission housing. The ATF is cooled by the engine coolant.

