

Left Side Cover

Removal

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner and dry with compressed air.
- Blow out all passages.
- Cut the lock tab and raise it, then remove the locknut of each shaft.
- Countershaft locknut has left-hand threads.


1. Remove the vehicle speed sensor (VSS) cover, then reinstall three bolts around the driveshaft oil seal.

CAUTION: Do not damage the driveshaft oil seal lip.



2. Slip the special tool onto the mainshaft and engage the parking brake pawl with the parking gear.

3. Remove the transmission left side cover in the following numbered sequence.

NOTE: Remove the special tool from the mainshaft after removing the locknuts.

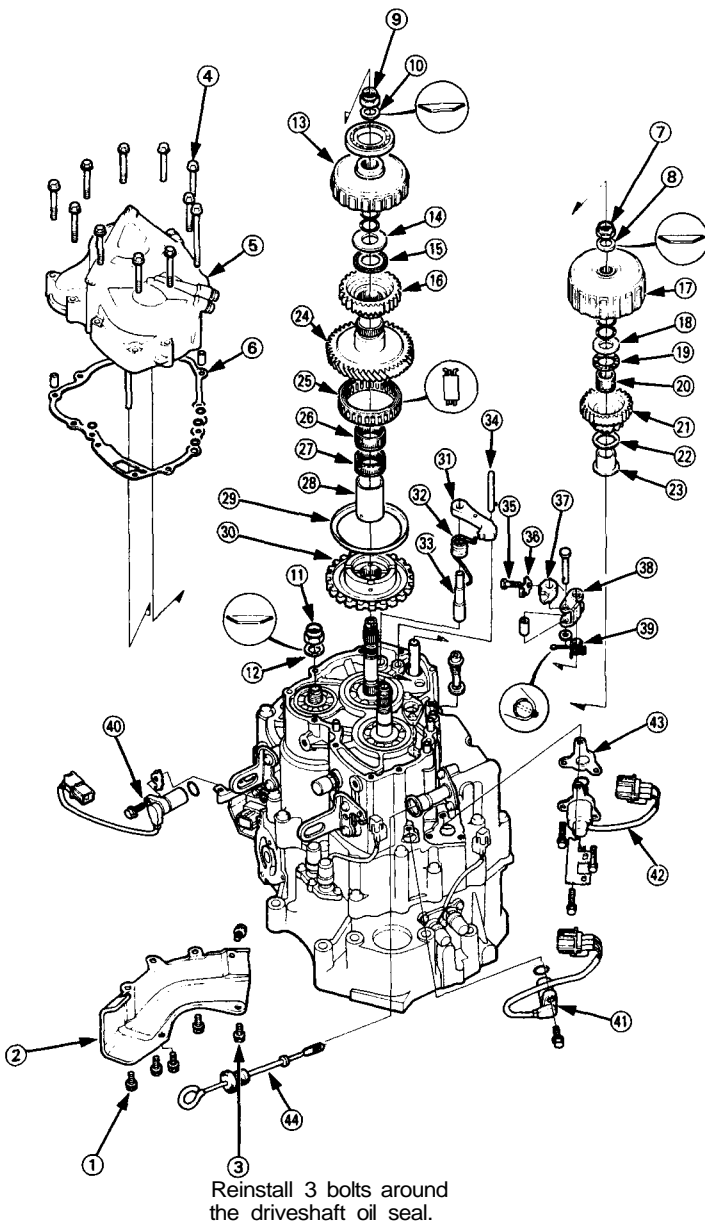

CAUTION: Protect the lip of the driveshaft oil seal by reinstalling three bolts, after removing the speed sensor cover.

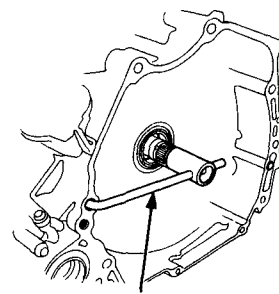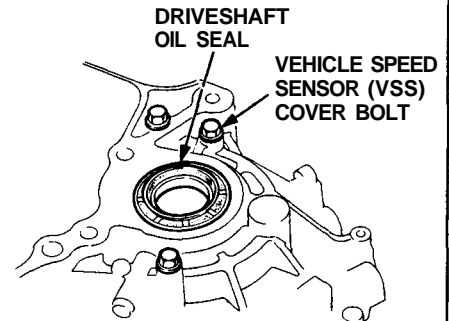

**MAINSHAFT HOLDER
07924-PJ4010A**

NOTE: Using a chisel, cut the lock tab. Pry it up and then remove the locknut from each shaft.

CAUTION: Keep all of the chiseled particles out of the transmission.

