




# Valve

## Assembly

NOTE: Coat all parts with ATF before assembly.


- Install the valve, valve spring and cap in the valve body and secure with the roller.

- Set the spring in the valve and install it in the valve body. Push the spring in with a screwdriver then install the spring seat.

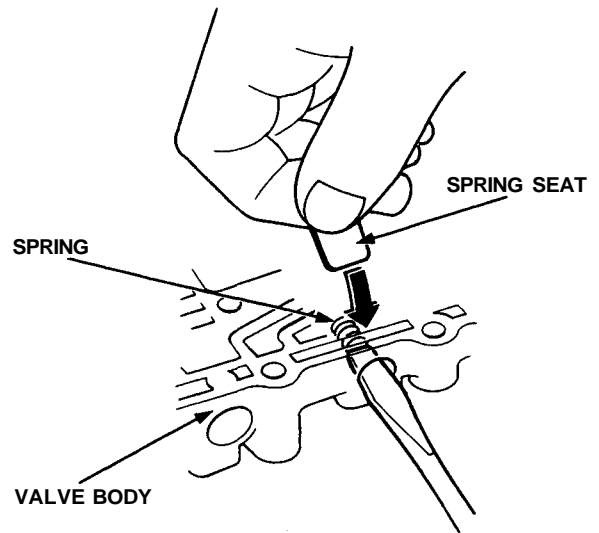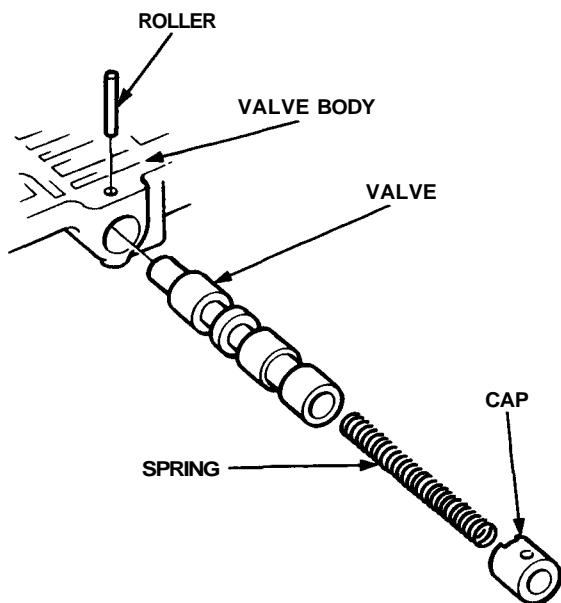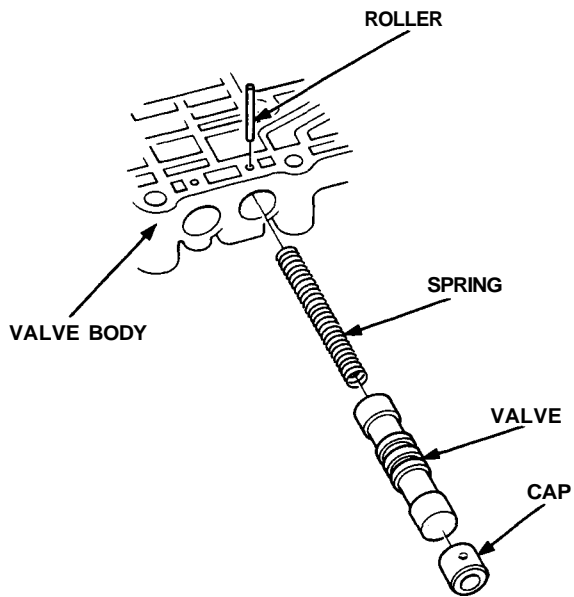



- Set the spring in the valve and install it in the valve body.  
Install the spring with a screwdriver, then install the valve cap with the cutout aligned with the screwdriver.

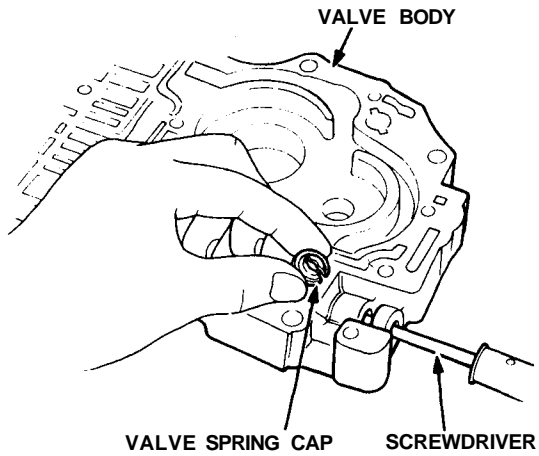

- Install the valve, spring and cap in the valve body.  
Push the cap, then install the stopper seat.

