


Shift Cable

Removal/Installation

CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-328).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

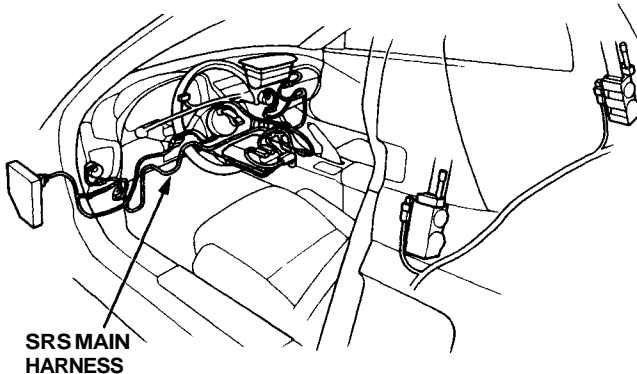

WARNING

Make sure lifts are placed properly.

1. Remove the center console panel (see section 20).
2. Remove the shift cable by removing the cotter pin and selector lever pin from the selector lever, and mounting bolts from the bracket beam.
3. Remove the shift cable clamps.
4. Remove the shift cable holder and shift cable cover.
5. Remove the shift cable by removing the lock pin and control lever pin from the control lever.

CAUTION: Take care not to bend the cable when removing it.

6. Install the shift cable in the reverse order of removal.
7. Check the cable adjustment on reassembly, on page 14-157.

