



## Troubleshooting Chart

The EPS has been reported on:

Connect the service check connector with a jumper wire (see page 17-43). Turn on the ignition switch.

Read the Diagnostic Trouble Code (DTC) and perform the troubleshooting according to the troubleshooting chart below.

Page reference	Diagnostic Trouble Code (DTC)	EPS Indicator light	System Indicated	Related components									
				EPS control unit	Torque sensor	Steering wheel speed sensor	Power unit	Power supply circuit	Speed sensor signal	Wire harness	No. 5 (10 A) fuse	EPS motor	
17-52	11	⊙	Torque sensor (VT <sub>1</sub> , VT <sub>2</sub> )	○	○						○		
	12	⊙	Torque sensor (VT <sub>3</sub> )	○	○						○		
	13	⊙	Torque sensor (VTA)	○	○						○		
	14	⊙	Torque sensor (REF 2.5)	○	○						○		
17-54	21	⊙	Steering wheel speed sensor	○		○					○		
17-56	22	⊙	Power unit	○		○	○				○		○
17-59	31	○	Power supply (ignition input)	○				○			○	○	
17-60	33	⊙	Vehicle speed sensor (VSS) signal input	○						○	○		
17-62	23,34 41,42 43,44	⊙	EPS control unit	○									