


## Rear Damper


### Installation (cont'd)

6. Install the rear damper bar on the stud bolts of damper as shown.
7. Loosely tighten the new self-locking nuts.

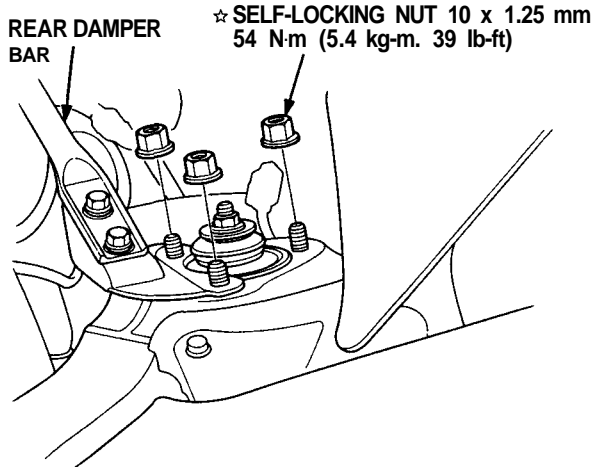

☆: Corrosion resistant bolt/nut

8. Secure the damper mounting nut.
9. Secure the damper assembly to the frame with the self-locking nuts.
10. Install the rear hatch glass garnish.

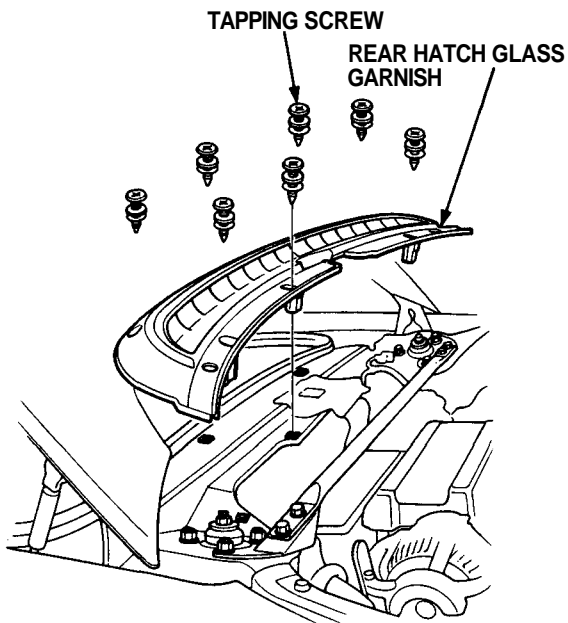


## Damper Disposal

### ⚠ WARNING

- The dampers contain nitrogen gas and oil under pressure. The pressure must be relieved before disposal to prevent explosion and possible injury when scrapping.
- Always wear eye protection to avoid getting metal shavings in your eyes when the gas damper pressure is relieved.

Place the damper on a level surface with its rod extended and drill a hole of 2.0—3.0 mm (0.08—0.12 in) diameter in the body to release the gas.

### <Front Damper:>

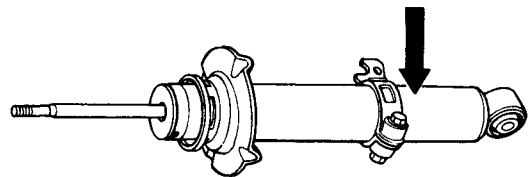

### <Rear Damper:>

