

# Ignition System

## Ignition Coils/Spark Plugs Removal

**CAUTION:**  
Ignition coils and spark plugs can become very hot in use, do not touch them until the engine has cooled down.

**NOTE:** Different ignition coils and ignition coil covers are used for the front and rear cylinders. Be sure to use the correct ones when mounting them.

1. Remove the ignition coil covers.
2. Disconnect the 2-P connectors from the ignition coils.
3. Remove the ignition coils.
4. Remove the spark plugs.

