

Safety Indicator

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected	Blown No. 5 (10 A) fuse (In the under-dash fuse box)	Blown No. 34 (15 A) fuse (In the under-dash fuse box)	Safety indicator input	Safety indicator (Diodes)	Brake light failure sensor	Door switch	Trunk latch switch	Retractable headlight control unit (see page 23-174)	Poor ground	Open circuit, loose or disconnected terminals
Symptom										
No indicator operates.	1		2						G401 G402	YEL
Indicator lights fail to come on when ignition switch is turned to ON.			1							
Door indicator lights not on with doors open.			2			1				GRN/BLU or GRN/RED
Trunk indicator light not on with trunk lid open.		1	3				2			GRN/BLK
Brake indicator light not on with blown brake light bulb.			1							ORN/WHT or GRN
Brake indicator light remains on with good brake light bulbs.			2		1			G551		
Ceiling light is not on with door open (with switch in MIDDLE position).				1						BLK/WHT
Retractor motor indicator light remains on with good retractor motor.			1					2		
Retractor motor indicator light not on with faulty retractor motor.			1					2		RED/YEL