



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

| Item to be inspected | | Blown No. 35 (20 A) fuse (In the under-hood fuse/relay box) | Disconnected or obstructed door lock rod/linkage | Driver's door lock knob switch (In the left door lock actuator) | Ignition key switch | Driver's door switch | Passenger's door switch | Driver's door lock actuator | Passenger's door lock actuator | Driver's door lock switch | Passenger's door lock switch | Control unit input | Poor ground | Open circuit, loose or disconnected terminals |
|--|---------------|--|---|--|---------------------|----------------------|-------------------------|-----------------------------|--------------------------------|---------------------------|------------------------------|--------------------|--------------|--|
| | | | | | | | | | | | | | | |
| Power door lock system doesn't operate at all. | | 1 | | | | | | | | | | 2 | G401 G402 | ORN |
| Doors don't lock or unlock with the driver's door lock switch. | Both doors | | | | | | | | | 1 | | 2 | G401 G402 | WHT/YEL or GRN/WHT ² |
| | One door | | 1 | | | | | 2 | | | | 3 | | WHT/RED or YEL/RED |
| Doors don't lock or unlock with the passenger's door lock switch. | Both doors | | | | | | | | | | 1 | 2 | G401 G402 | BLK/RED or BLK/WHT |
| | One door | | 1 | | | | | 2 | | | | 3 | | WHT/RED or YEL/RED |
| Doors don't lock or unlock with the driver's door lock knob. | Both doors | | | 1 | | | | | | | | 2 | G401 G402 | BLU/WHT or BLU/RED ¹ |
| | One door | | 1 | | | | | 2 | | | | 3 | | WHT/RED or YEL/RED |
| Doors will lock when the key is still in the ignition switch and driver's door is open. | | | | | 1 | 2 | 3 | | | | | 4 | G401 G402 | GRN/RED, BLU/GRN or GRN/BLU |