


# Security Alarm System

## Ignition Key Switch Test

### CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 24-10).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

1. Remove the dashboard lower cover and knee bolster pad.

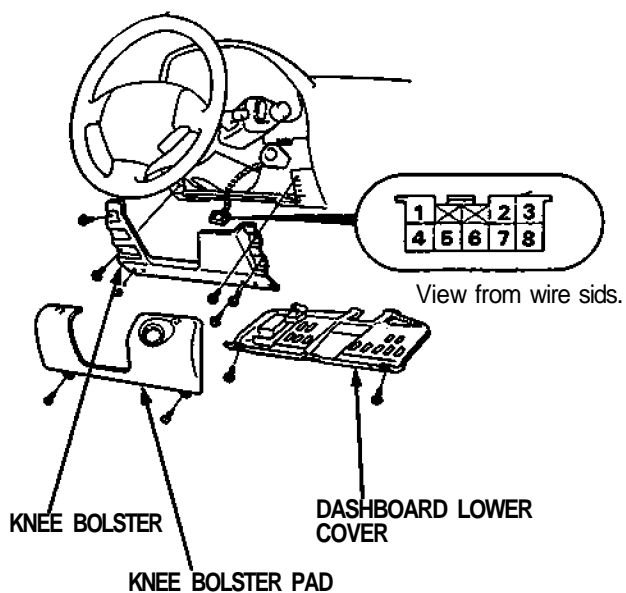

2. If necessary, remove the knee bolster.
3. Disconnect the 8-P connector from the floor wire harness.
4. Check switch continuity.
  - There should be continuity between the No. 8 and No. 7 terminals with the ignition key inserted into the ignition key cylinder.
  - There should be no continuity with the ignition key removed.