


# Idle Control System

## Troubleshooting Flowchart — A/T Shift Position Signal

This signals the PGM-FI ECU when the transmission is in Neutral or Park.

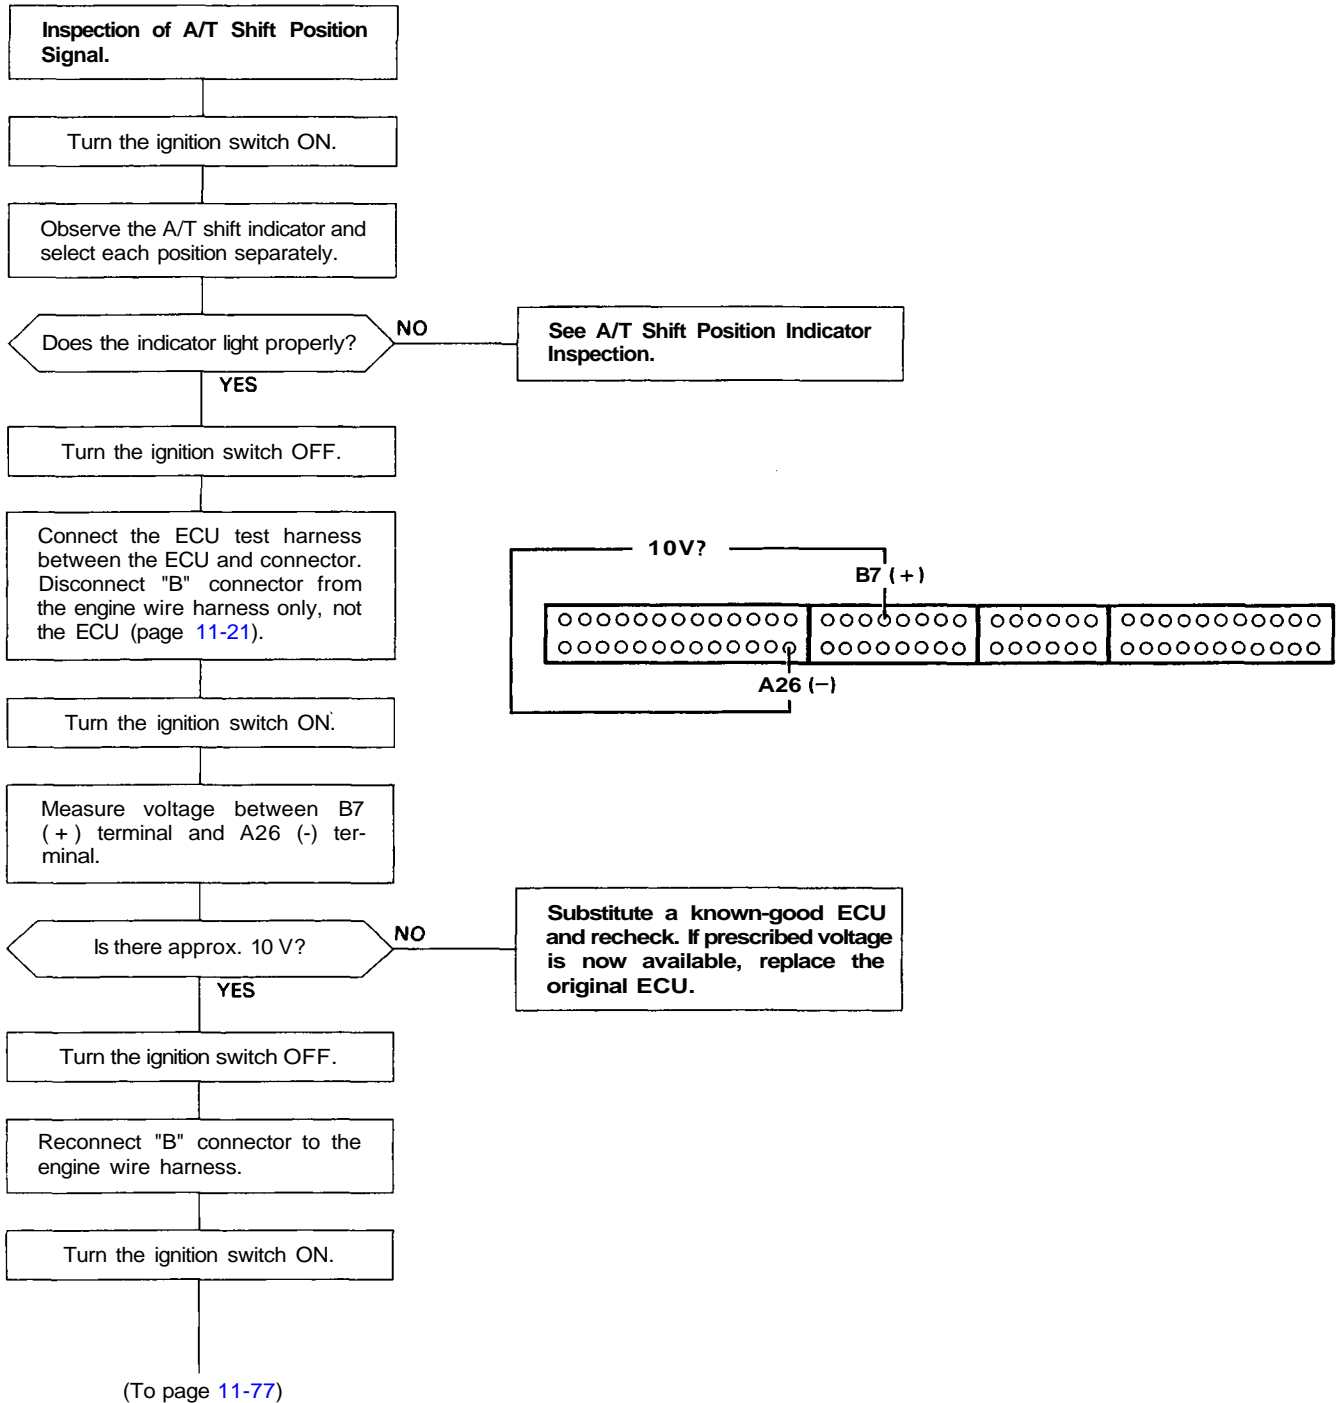



(From page 11-76)

