

Idle Control System

Troubleshooting Flowchart — Clutch Switch Signal

This signals the PGM-FI ECU when the clutch is engaged.

Inspection of clutch switch signal.

Connect the ECU test harness between the ECU and connector (page 11-21).

Turn the ignition switch ON.

Measure voltage between C7 (+) terminal and A26 (-) terminal.


Is voltage less than 1 V?

YES

Depress the clutch pedal.

Measure voltage between C7 (+) terminal and A26 (-) terminal.

(To page 11-81)

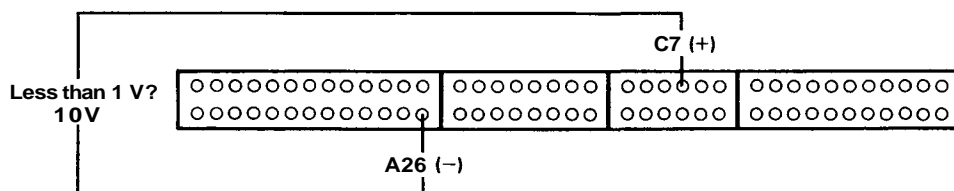

NO

Turn the ignition switch OFF.

Disconnect the 3P connector from the clutch switch.

Check for continuity between the A terminal and B terminal on the clutch switch.

Does continuity exist?

YES

Turn the ignition switch ON.

Measure voltage between PNK (+) terminal and body ground.

Is there approx. 10 V?

YES

Repair open in BLK wire between the clutch switch and G401.

NO

Replace the clutch switch.

NO

Repair open in PNK wire between ECU (C7) and the clutch switch.

