



## Fuel Filter

### Replacement

**⚠ WARNING** Do not smoke while working on fuel system. Keep open flame away from work area.

The filter should be replaced: every 4 years or 60,000 miles (96,000 km), whichever comes first or whenever the fuel pressure drops below the specified value (323–363 kPa, 3.30–3.70 kg/cm<sup>2</sup>, 46–53 psi with the pressure regulator vacuum hose disconnected) after making sure that the fuel pump and the pressure regulator are OK.

1. Place a shop towel under and around the fuel filter.
2. Relieve fuel pressure (page 11-87).
3. Remove the 12 mm banjo bolt and the fuel feed pipe from the filter.
4. Remove the fuel filter clamp and fuel filter.
5. When assembling, use new washers, as shown.

