


# Air Intake System

## Throttle Body (cont'd)

Disassembly

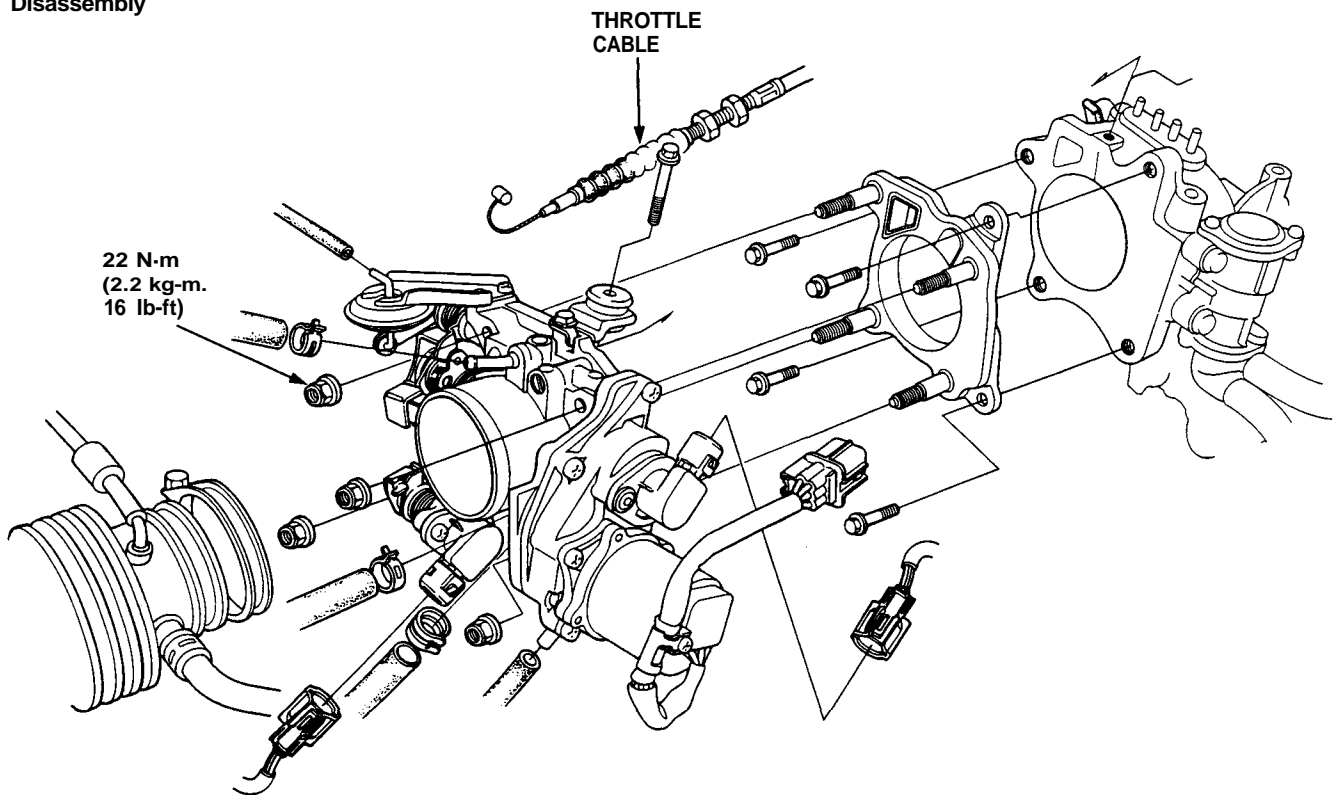

### CAUTION:

- The throttle stop screw is non-adjustable.
- After reassembly, adjust the throttle cable (page 11-113).
- After replacement, adjust the idle speed (page 11-84).

### DASHPOT DIAPHRAGM

Test, page 11-118

