

Carpet


Replacement

SRS wire harnesses are routed near the carpet.

CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Before disconnecting the SRS wire harness, install the short connector on the airbag (see page 23-323).
- Replace the entire effected SRS harness assembly if it has an open circuit or damaged wiring.

1. To remove the carpet, first remove the:
 - Seats (page 20-39)
 - Footrest
 - Under-dash fuse box lid (page 20-38)
 - Side sill trim (page 20-38)
 - Side silt pad (page 20-38)
 - Rear side panel (page 20-38)
 - Center armrest (page 20-38)
 - Center console panel (page 20-43)
2. Pull up the retainers and carpet clips at the front edge (passenger's side), then remove the floor carpet.
3. Remove the console carpet attaching screw from the heater unit (passenger's side).
4. Remove the carpet hooks from the dashboard inside screws, then remove the console carpet.

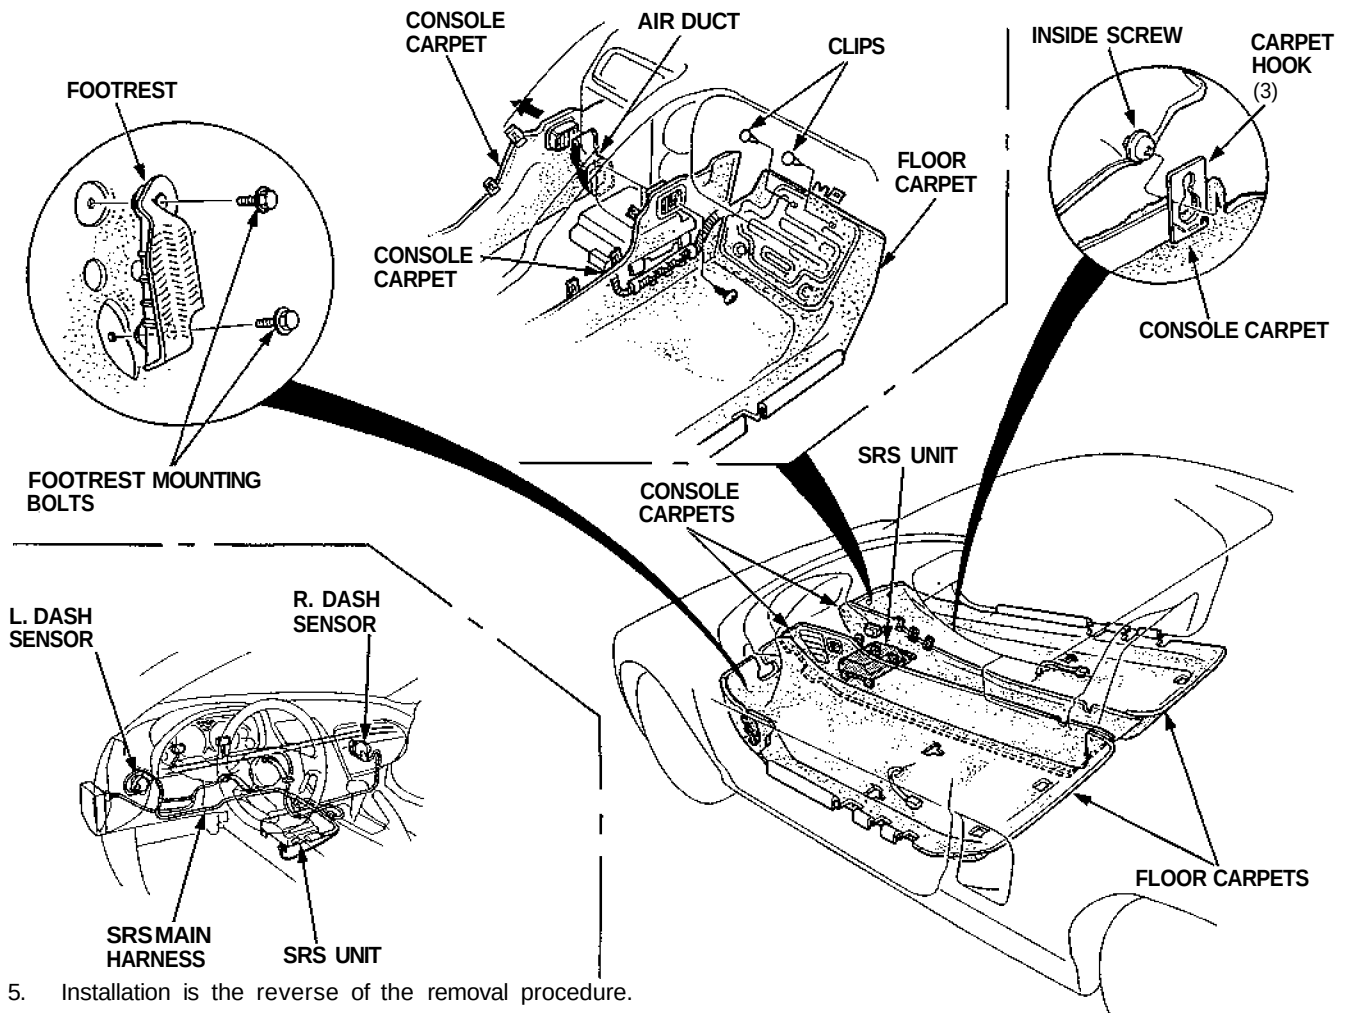

5. Installation is the reverse of the removal procedure.

NOTE:

- Take care not to damage, wrinkle or twist the carpet.
- Make sure the console carpet air vents are inserted into the heater unit and air duct.
- Make sure the seat harnesses are routed correctly.