




Speedo/Tripmeter/Odometer

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected	Blown No. 5 (10A) fuse (in the under-dash fuse box)	Speedometer	Odometer	Trip meter	Printed circuit panel A	Printed circuit panel B	Speed sensor input test	Speed sensor is not in stalled correctly	Undone joint connector	Poor ground	Open circuit in wires, loose or disconnected terminals
Symptom											
Speedometer operates, but deflection error is great.					2			1			
Odometer and trip meter operate, but speedometer does not operate.		1			2						
Speedometer and trip meter operate, but odometer does not operate.			2		4	3			1		
Speedometer and odometer operate, but trip meter does not operate.				1	2						
Speedometer operates, but odometer and trip meter do not operate.					1						
Speedometer, odometer and trip meter do not operate.	1				3		2			G401 G402	YEL

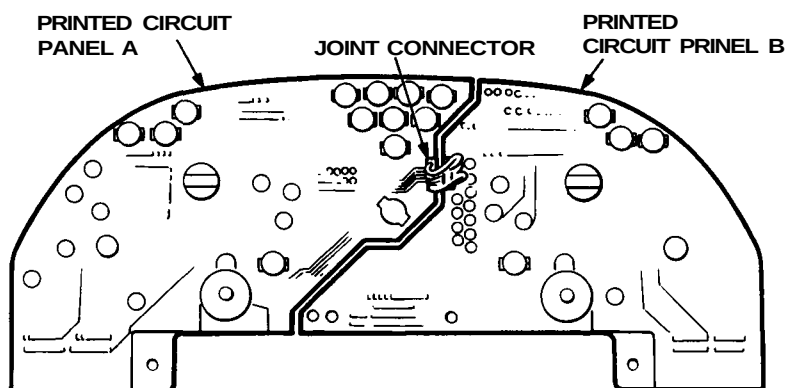

View from the back of the gauge assembly.