




Lighting/Turn Signal Switch Test

1. Remove the dashboard lower cover and dashboard center panel.
2. If necessary, remove the knee bolster.
3. Disconnect the 16-P connector from the floor wire harness.
4. Check for continuity between the terminals in each switch position according to the table.

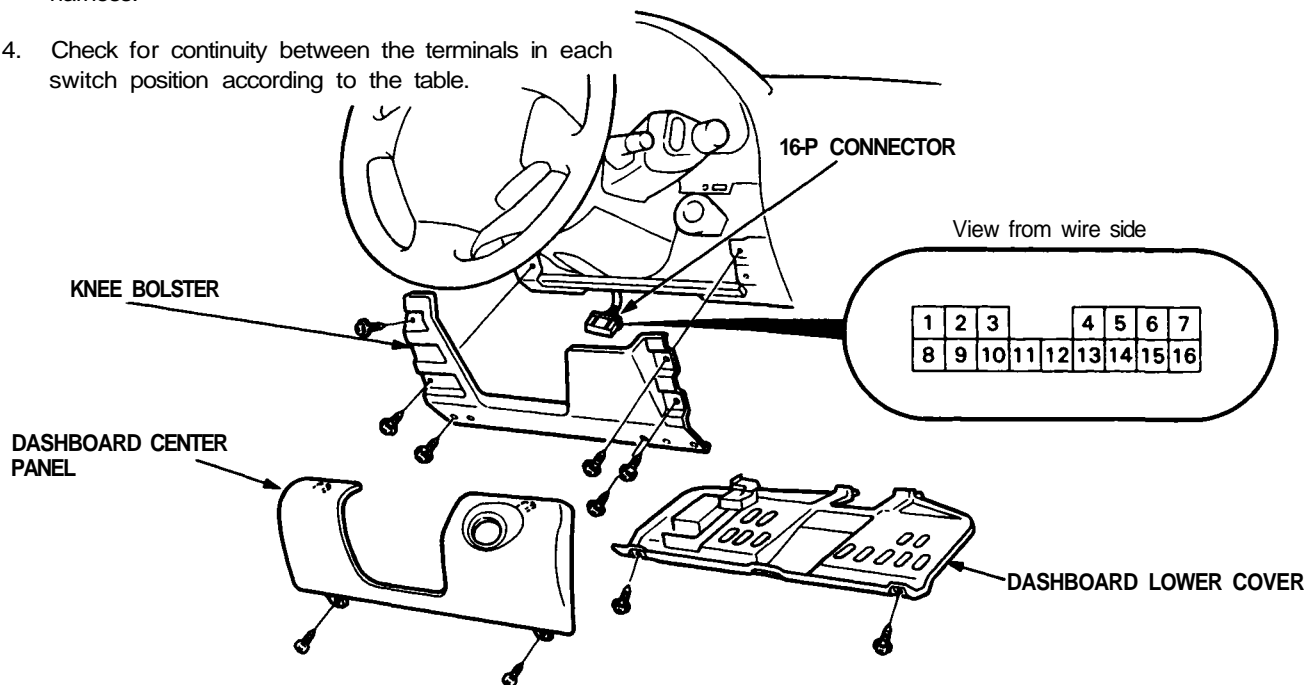

Lighting/Dimmer/Passing Switch

Terminal		1	4	6	7	10	13	16
Headlight switch	OFF			○	←	○		
	•	○	→	○				
	•	○	→	○				
Dimmer switch	LOW	○	→	○				
	HIGH	○	→	○				
		○	→	○				
Passing switch	OFF			○	←	○		
	ON			○	←	○		

Turn Signal Switch

Terminal		5	8	9
R	○	→	○	
NEUTRAL				
L	○	→	○	