



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		Blown No. 35 (20A) fuse (in the under-hood fuse/relay box)	Disconnected or obstructed door lock rod/linkage	Driver's door lock knob switch (in the left door lock actuator)	Ignition key switch	Driver's door switch	Driver's door lock actuator	Passenger's door lock actuator	Driver's door lock switch	Passenger's door lock switch	Control unit input	Poor ground	Open circuit in wires loose or disconnected terminals
		Symptom											
Power door lock system doesn't operate at all.		1									2	G401 G402	ORN
Doors don't lock or unlock with the driver's door lock switch.	Both doors								1		2	G401 G402	WHT/YEL or GRN/WHT ²
	One door		1				2				3		WHT/RED, or YEL/RED
Doors don't lock or unlock with the passenger's door lock switch.	Both doors									1	2		BLK/RED or BLK/WHT
	One door		1				2				3		WHT/RED or YEL/RED
Doors don't lock or unlock with the driver's door lock knob.	Both door			1							2	G401 G402	BLU/WHT or BLU/RED ¹
	One door		1				2				3		WHT/RED or YEL/RED
The door is not supposed to be locked, but it is locked. (Remains locked after the ignition key has been inserted and the door opened.)					1	2					3	G401 G402	BLU/GRN or GRN/BLU