

Rear Window Defogger

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected	Blown indicator light bulb	Blown No 4 (15A) fuse (in the under-dash fuse box)	Defogger timer circuit input (in the integrated control unit)	Blown No. 5 (10A) fuse (in the engine compartment fuse/relay box)	Blown No. 11 (40A) fuse (in the main fuse box)	Function test	Defogger relay	Broken defogger wire	Poor ground	Open circuit in wires, loose or disconnected terminals
Symptom										
Defogger operates, but indicator light does not go on.	1									YEL/BLK or YEL/WHT
Defogger does not operate and indicator light does not go on.		1	3	2					G401	YEL or YEL/WHT
Defogger does not operate, but indicator light goes on.					1	2	3	4	G801	YEL/WHT, YEL/BLK, BLK/GRN
Operation time is too long or too short (Normal operation time is 25 minutes).			1							WHT/RED or BLK