Component Locations

Index

FRONT KNOCK SENSOR
Troubleshooting, page 11-62

FUEL PUMP RESISTOR
Inspection, page 11-106

COOLANT TEMPERATURE (TW) SENSOR
Troubleshooting, page 11 - 48

CRANK/CYL SENSOR
Troubleshooting, page 11-46

EGR VALVE
Troubleshooting,
page 11-128

INJECTOR RESISTOR
Testing, page 11-94

CONTROL BOX
page 11-6

FRONT HEATED OXYGEN (O2) SENSOR
Troubleshooting, page 11-32

INTAKE AIR TEMPERATURE (TA) SENSOR
Troubleshooting, page 11-52

REAR KNOCK SENSOR
Troubleshooting, page 11-62

THROTTLE ANGLE SENSOR
Troubleshooting,
page 11-50

FAST IDLE VALVE
Inspection, page 11-83

REAR HEATED OXYGEN (O$_2$) SENSOR
Troubleshooting, page 11 -32

EACV
Troubleshooting,
page 11-70

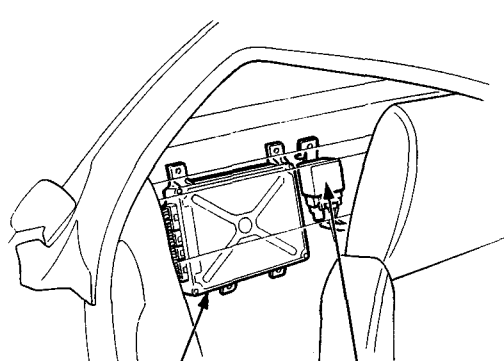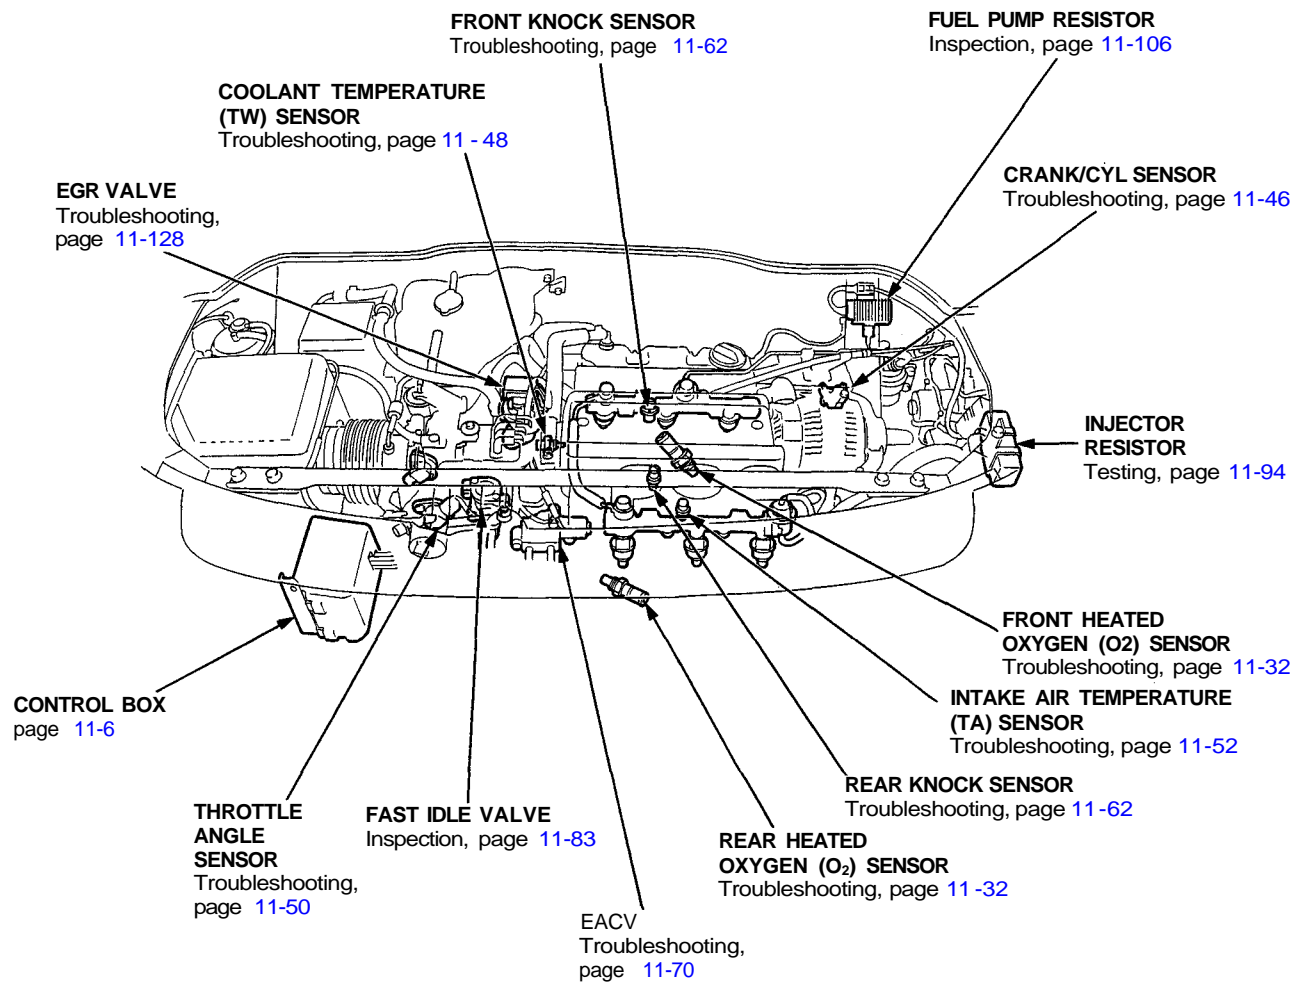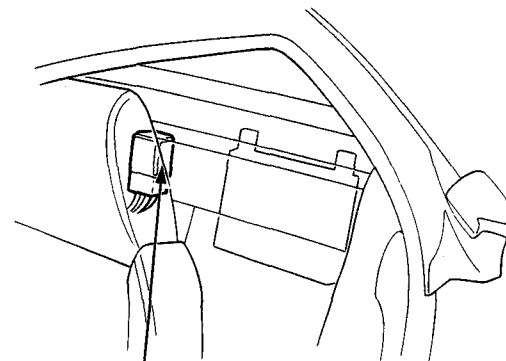**MAIN RELAY**
Relay Testing, page 11-104
Inspection, page 11-105

FUEL PUMP RELAY
Inspection, page 11-99

ELECTRONIC CONTROL UNIT (ECU)
Troubleshooting, page 11-26

11-3

Component Locations

Index

THROTTLE CABLE
Inspection/Adjustment, page 11-113
Installation, page 11-113

THROTTLE BODY
Inspection, page 11-114
Disassembly, page 11-116

AIR CLEANER
Disassembly,
page 11-112

**AIR INTAKE
DUCT**

FUEL PUMP
Troubleshooting, page 11-99
Testing, page 11-102
Replacement, page 11-102

FUEL FEED PIPE

FUEL CUT VALVES

FUEL FILTER
Replacement, page 11-97

TWO-WAY VALVE
Testing, page 11-140

PRESSURE REGULATOR
Testing, page 11-95
Replacement, page 11-96

FUEL FILLER CAP

FUEL RETURN PIPE

CHARCOAL CANISTER
Troubleshooting, page 11-137

FUEL INJECTORS
Troubleshooting,
page 11-89
Replacement, page 11-92

FUEL VAPOR HOSE

FUEL TANK
Replacement,
page 11-108

FUEL PIPE