


# Lubrication Points

For the details of lubrication points and types of lubricants to be applied, refer to the Illustrated Index and various work procedures (such as Assembly/Reassembly, Replacement, Overhaul, Installation, etc.) contained in each section.


No.	LUBRICATION POINTS	LUBRICANT
1	Engine	API Service Grade: SG SAE viscosity: 10 W—30 recommended Fuel Efficient Oil: Identified by the words, "Energy Conserving II" SAE Viscosity: See chart below.
2	Transmission Manual Automatic	API Service Grade: SF or SG SAE Viscosity: See chart below. Honda Premium Formula Automatic Transmission Fluid or an equivalent DEXRON® II type automatic transmission fluid
3	Brake Line (including anti-lock brake system)	Brake fluid DOT3 or DOT4
4	Clutch Line	Brake fluid DOT3 or DOT4
5	Shift lever pivots (M/T)	Silicone grease with molybdenum disulfide
6	Release fork (M/T)	Multi-purpose grease
7	Steering gearbox (Manual)	
8	Steering boots	
9	Steering column bushings	
10	Steering ball joints	
11	Select lever (A/T)	
12	Pedal linkage	
13	Intermediate shaft	
14	Brake master power pushrod	
15	Trunk hinges	
16	Door hinges upper and lower	
17	Door opening detents	
18	Fuel filler lid	
19	Front hood hinges and latch	
20	Clutch master cylinder pushrod	
21	Tilt lever	
22	Parking brake cable end	
23	Throttle cable end	
24	Rear hatch latch	
25	Retractable headlight pin contact area	
26	Shift cable end and select cable end	Silicone grease
27	Caliper Piston seal, Dust seal, Caliper pin, Piston	

Recommended Engine Oil  
API Service Grade: SG  
Fuel Efficient Oil:  
Identified by the words, "Energy Conserving II"

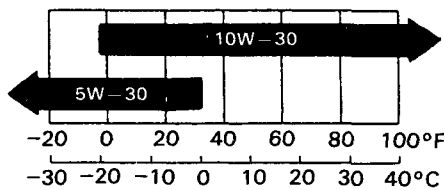

Engine oil viscosity for ambient temperature ranges

Recommended Manual Transmission Oil  
API Service Grade: SF or SG

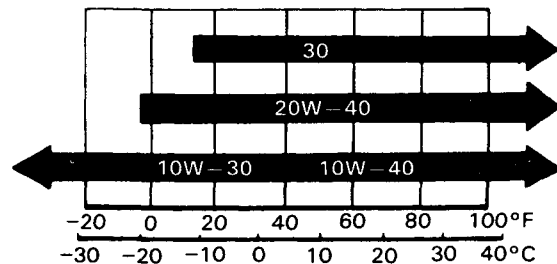

transmission oil viscosity for ambient temperature ranges

