


# Side Marker/Turn Signal/Hazard Flash System

## Turn Signal/Hazard Relay Input Test

1. Remove the dashboard lower cover. Remove the turn signal/hazard relay from the left kick panel, then disconnect the 6-P connector.
2. Inspect the connector terminals to be sure they are all making good contact.
  - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
  - If the terminals look OK, make the following input tests at the connector.
    - If any test indicates a problem, find and correct the cause, then recheck the system.
    - If all the input tests prove OK, the control unit must be faulty; replace it.

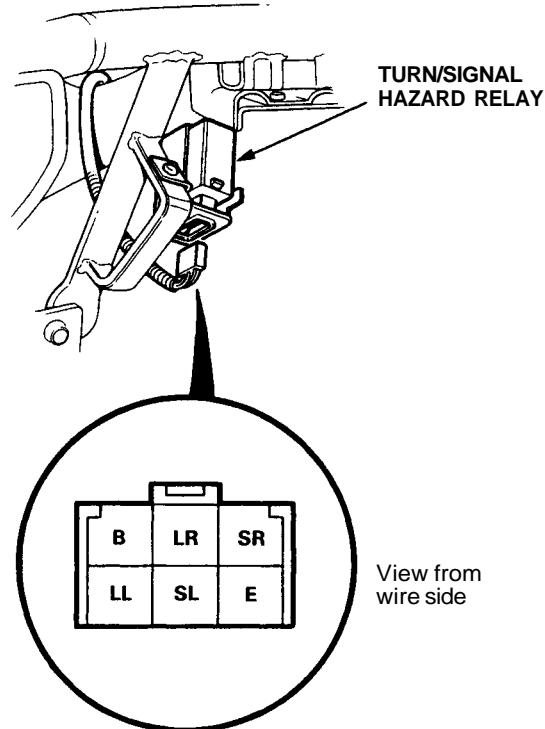

| No. | Terminal        | Test condition  | Test: Desired result   | Possible cause if result is not obtained  |
|-----|-----------------|---|--|---|
| 1   | E<br>(BLK)      | Under all conditions.   | Check for continuity to ground:<br>There should be continuity.   | <ul style="list-style-type: none"> <li>• Poor ground (G401, G402).</li> <li>• An open in the wire.</li> </ul>   |
| 2   | B<br>(RED/WHT)  | Under all conditions.   | Check for voltage to ground:<br>There should be battery voltage. | <ul style="list-style-type: none"> <li>• Blown No. 46 (10 A) fuse.</li> <li>• An open in the wire.</li> </ul>   |
| 3   | SR<br>(BLU/YEL) | Ignition switch ON<br>and turn signal<br>switch in right<br>position. | Check for voltage to ground:<br>There should be battery voltage. | <ul style="list-style-type: none"> <li>• Blown No. 5 (10 A) fuse.</li> <li>• Faulty turn signal switch or cancel unit.</li> <li>• An open in the wire.</li> </ul>                               |
|     | SL<br>(BLU/GRN) | Ignition switch ON<br>and turn signal<br>switch in left<br>position.  |  |   |
| 4   | SR<br>(BLU/YEL) | Hazard warning<br>switch ON.  | Check for voltage to ground:<br>There should be battery voltage. | <ul style="list-style-type: none"> <li>• Faulty hazard warning switch.</li> <li>• An open in the wire.</li> </ul>   |
|     | SL<br>(BLU/GRN) |   |  |   |
| 5   | LR<br>(GRN/YEL) | Connect the B terminal to the LR terminal.                            | Right turn signal lights should come on.                         | <ul style="list-style-type: none"> <li>• Blown bulb.</li> <li>• Faulty side marker flasher circuit.</li> <li>• Poor ground (G301, G401, G402, G551).</li> <li>• An open in the wire.</li> </ul> |
| 6   | LL<br>(GRN/BLU) | Connect the B terminal to the LL terminal.                            | Left turn signal lights should come on.                          | <ul style="list-style-type: none"> <li>• Blown bulb.</li> <li>• Faulty side marker flasher circuit.</li> <li>• Poor ground (G301, G401, G402, G551).</li> <li>• An open in the wire.</li> </ul> |